



CATALOG OF REPLACEMENT PARTS

Vulcan SX24/SX36/SX60/SX60F Range


 

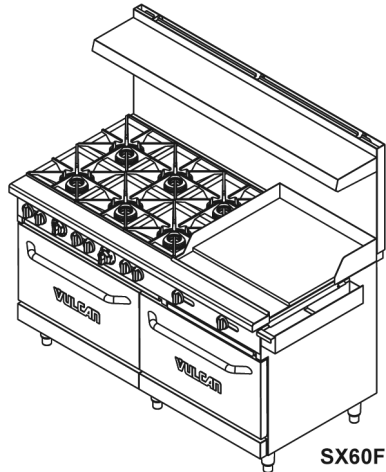 


Table of Contents

5	DOOR
7	COVERS (SX24)
9	COVERS (SX36)
11	COVERS (SX60 / SX60F)
13	OVEN
15	PIPING
17	TUBING
19	GRIDDLE

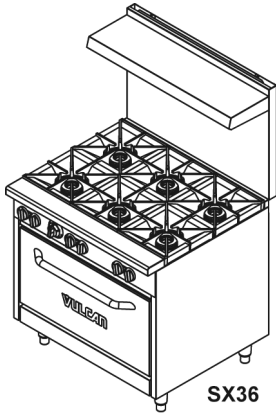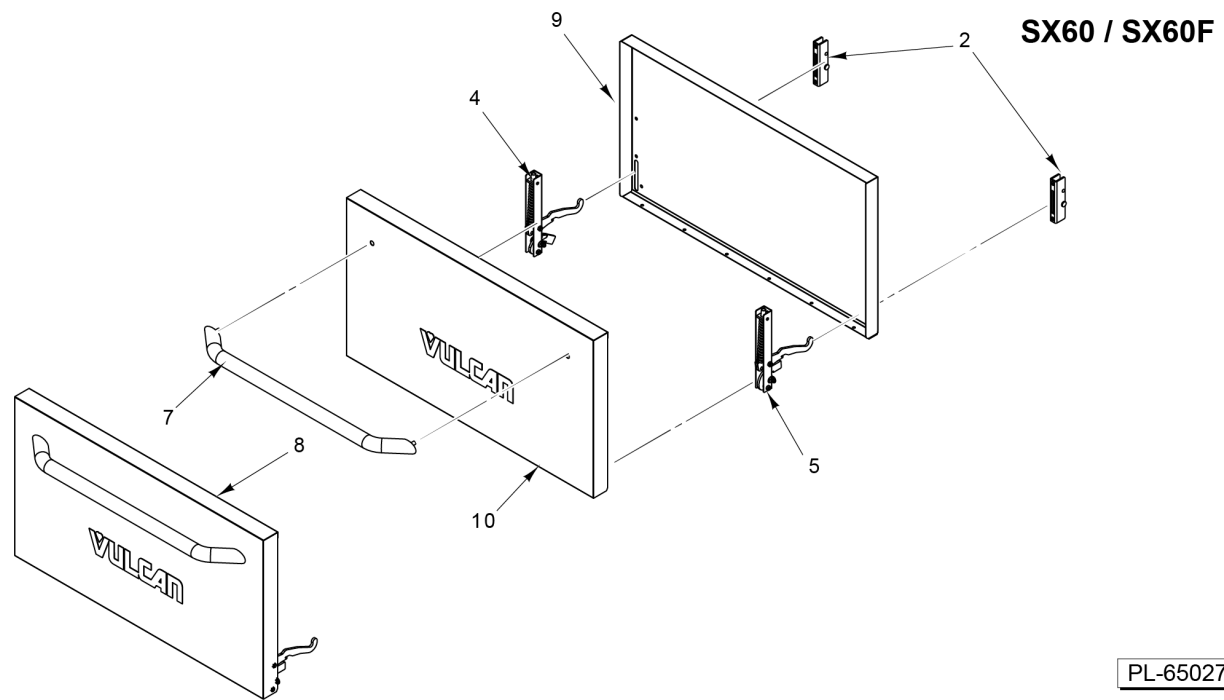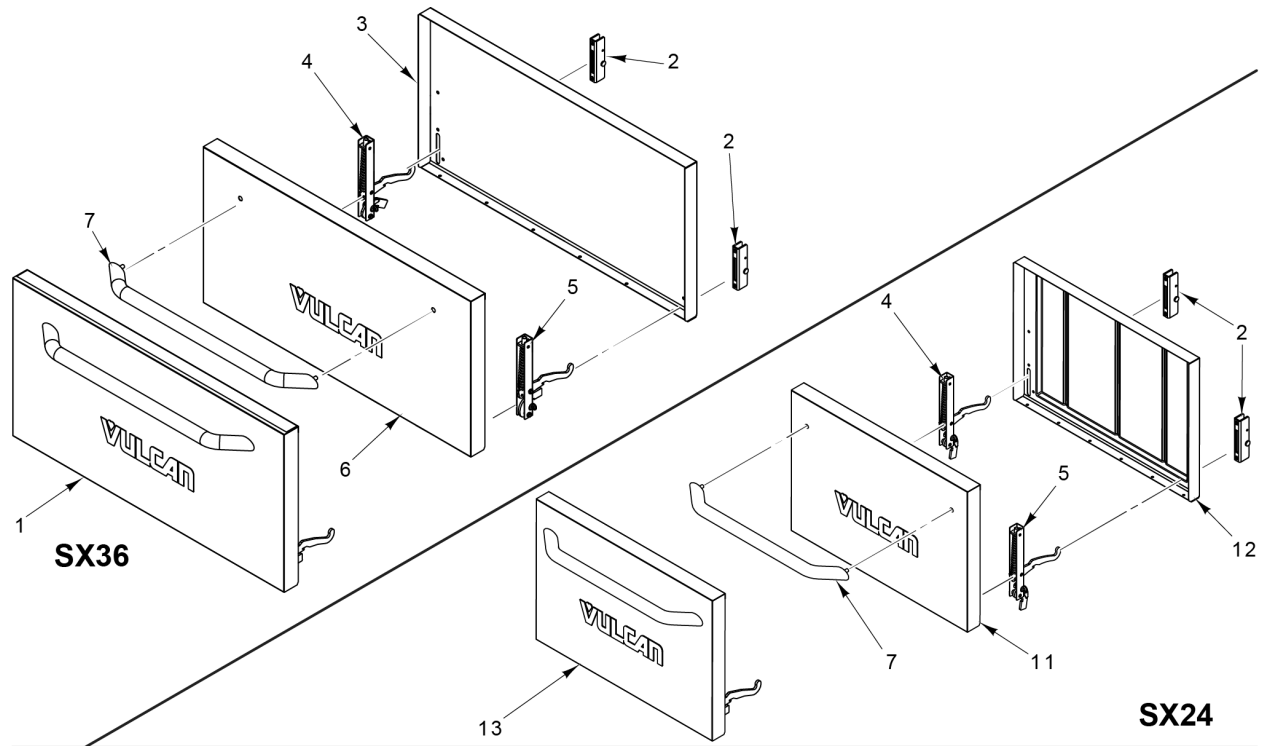 


PL-65027

DOOR

DOOR

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-65027			
1	00-922490-0036A	Door Assy. (SX36A).....	1
2	00-961331-00003	Stop - Door Hinge.....	2
3	00-922447-00036	Liner - Door (SX36).....	1
4	00-961331-00002	Hinge - LH Door.....	1
5	00-961331-00001	Hinge - RH Door.....	1
6	00-922441-00036	Panel - Door Outside (SX36).....	1
7	00-922423	Handle - Door.....	1
8	00-922490-0060A	Door Assy. (SX60).....	1
9	00-922447-00060	Liner - Door (SX60).....	1
10	00-922441-00060	Panel - Door Outside (SX60).....	1
11	00-922441-00024	Panel - Door Outside (SX24).....	1
12	00-922447-0024A	Liner - Door (SX24).....	1
13	00-922490-0024A	Door Assy. (SX24).....	1

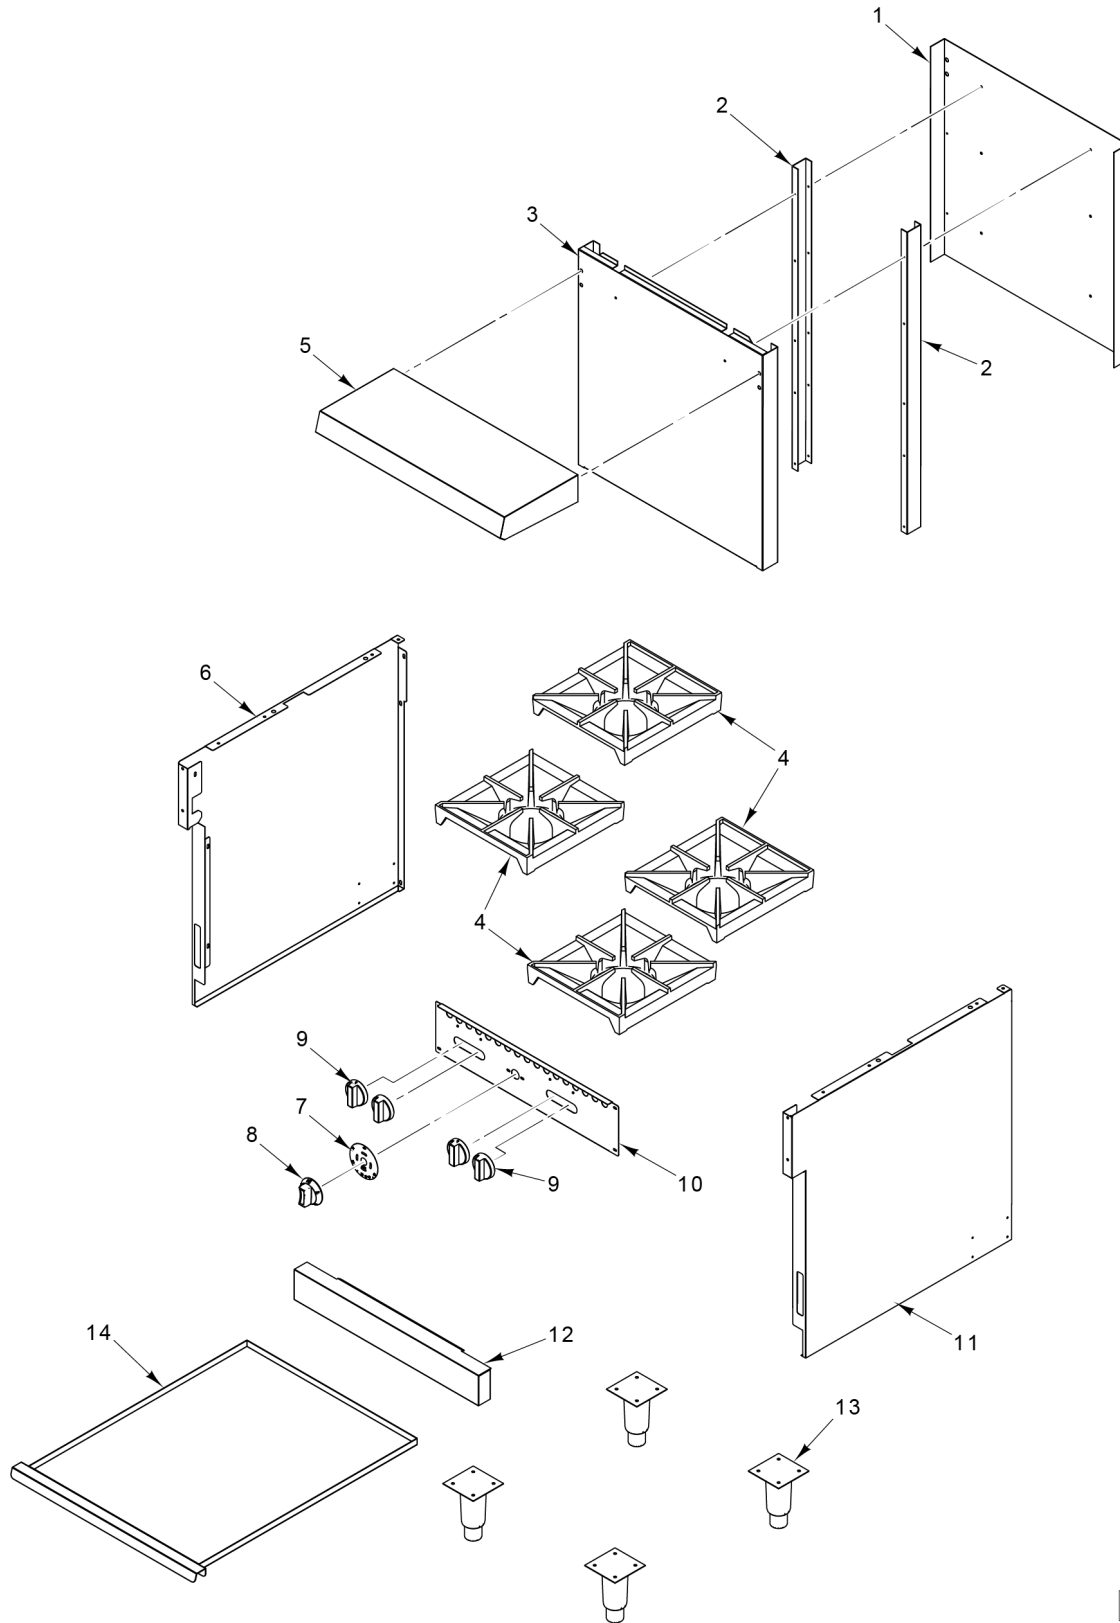 


PL-61602

COVERS (SX24)

COVERS (SX24)

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-61602			
1	00-922481	Riser - Back (Back Panel) (SX24).....	1
2	00-922438	Support - Back Riser.....	2
3	00-922480	Riser - Back (Front Panel) (SX24).....	1
4	00-925000	Grate - Front.....	4
5	00-922482	Cover - Shelf (SX24).....	1
6	00-922494	Panel - Side (LH) (SX24).....	1
7	00-922421	Plate - Dial.....	1
*8	00-961412	Knob - Oven.....	1
9	00-961411	Knob - Open Top Burner.....	4
10	00-922478	Panel - Front (SX24).....	1
11	00-922493	Panel - Side (RH) (SX24).....	1
12	00-922483	Panel - Kick (SX24).....	1
13	00-413112-00012	Leg - Plate Mount (6 In.).....	4
14	00-922431-00024	Crumb Tray Assy. (SX24).....	1

 * Must also order part number 00-922448 insert core

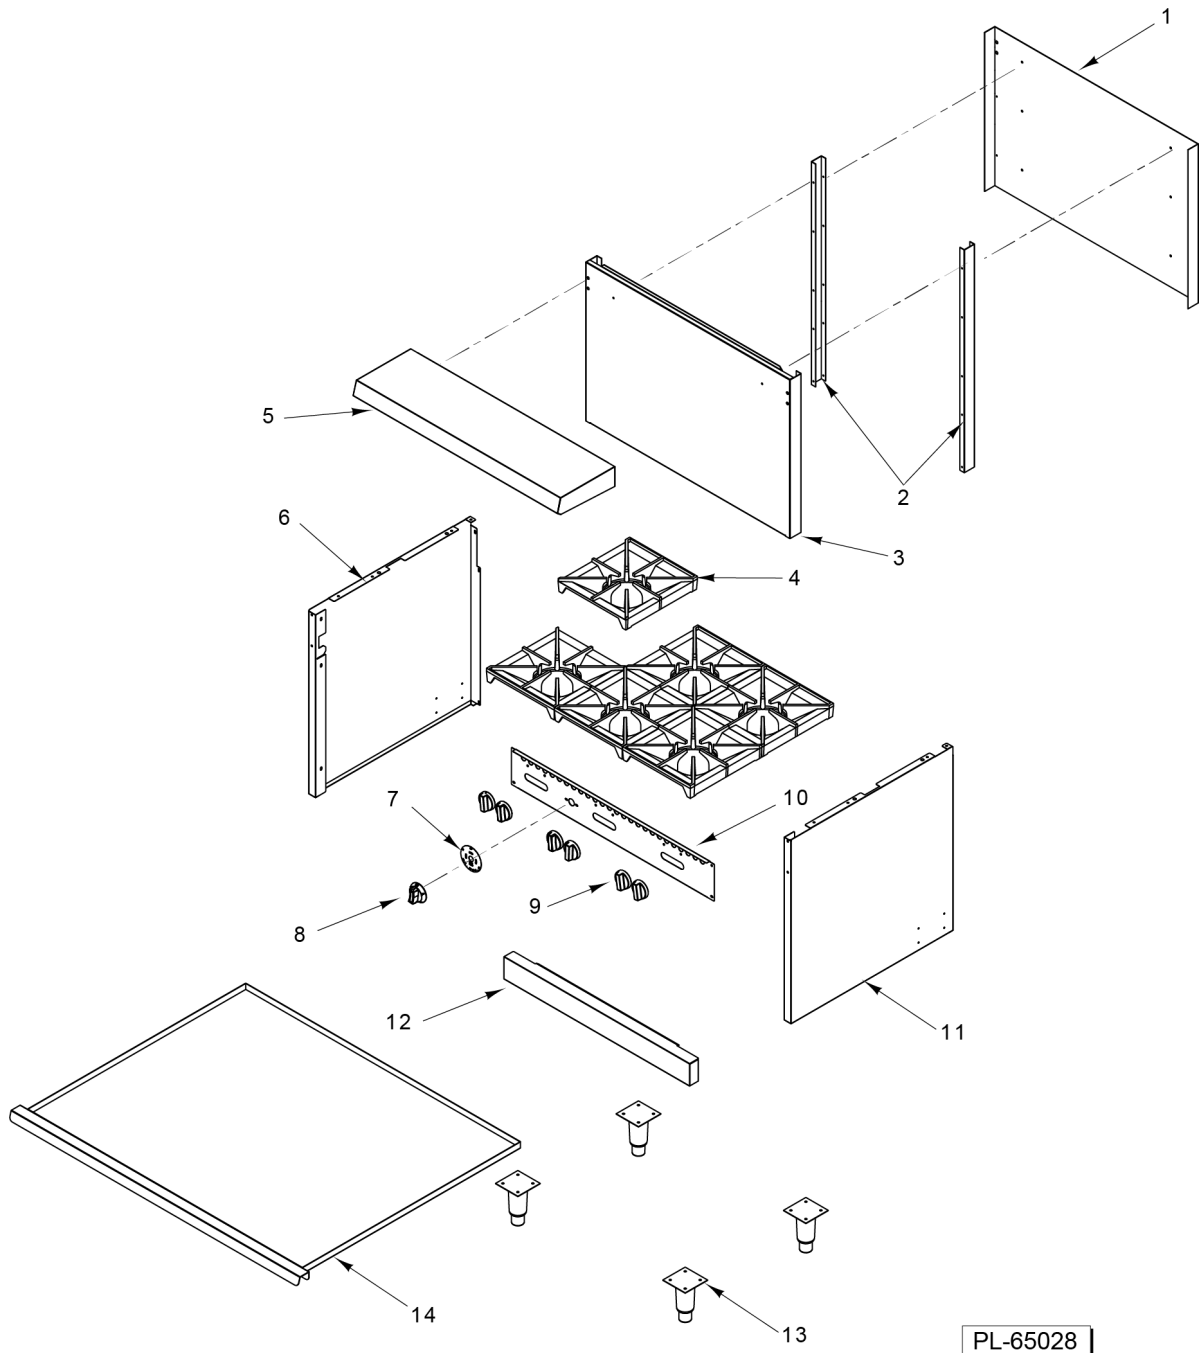


PL-65028

COVERS (SX36)

COVERS (SX36)

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-65028			
1	00-922436-00036	Riser - Back (Back Panel) (SX36).....	1
2	00-922438	Support - Back Riser.....	2
3	00-922437-00036	Riser - Back (Front Panel) (SX36).....	1
4	00-925000	Grate.....	6
5	00-922439-00036	Cover - Shelf (SX36).....	1
6	00-922440-00002	Panel - LH Side (SX36).....	1
7	00-922421	Plate - Dial.....	1
*8	00-961412	Knob - Oven.....	1
9	00-961411	Knob - Open Top Burner.....	6
10	00-922446-00036	Panel - Front (SX36).....	1
11	00-922440-00001	Panel - RH Side (SX36).....	1
12	00-922435-00036	Panel - Kick (SX36).....	1
13	00-413112-00012	Leg - Plate Mount (6 In.).....	4
14	00-922431	Crumb Tray Assy. (SX36).....	1

 * Must also order part number 00-922448 insert core

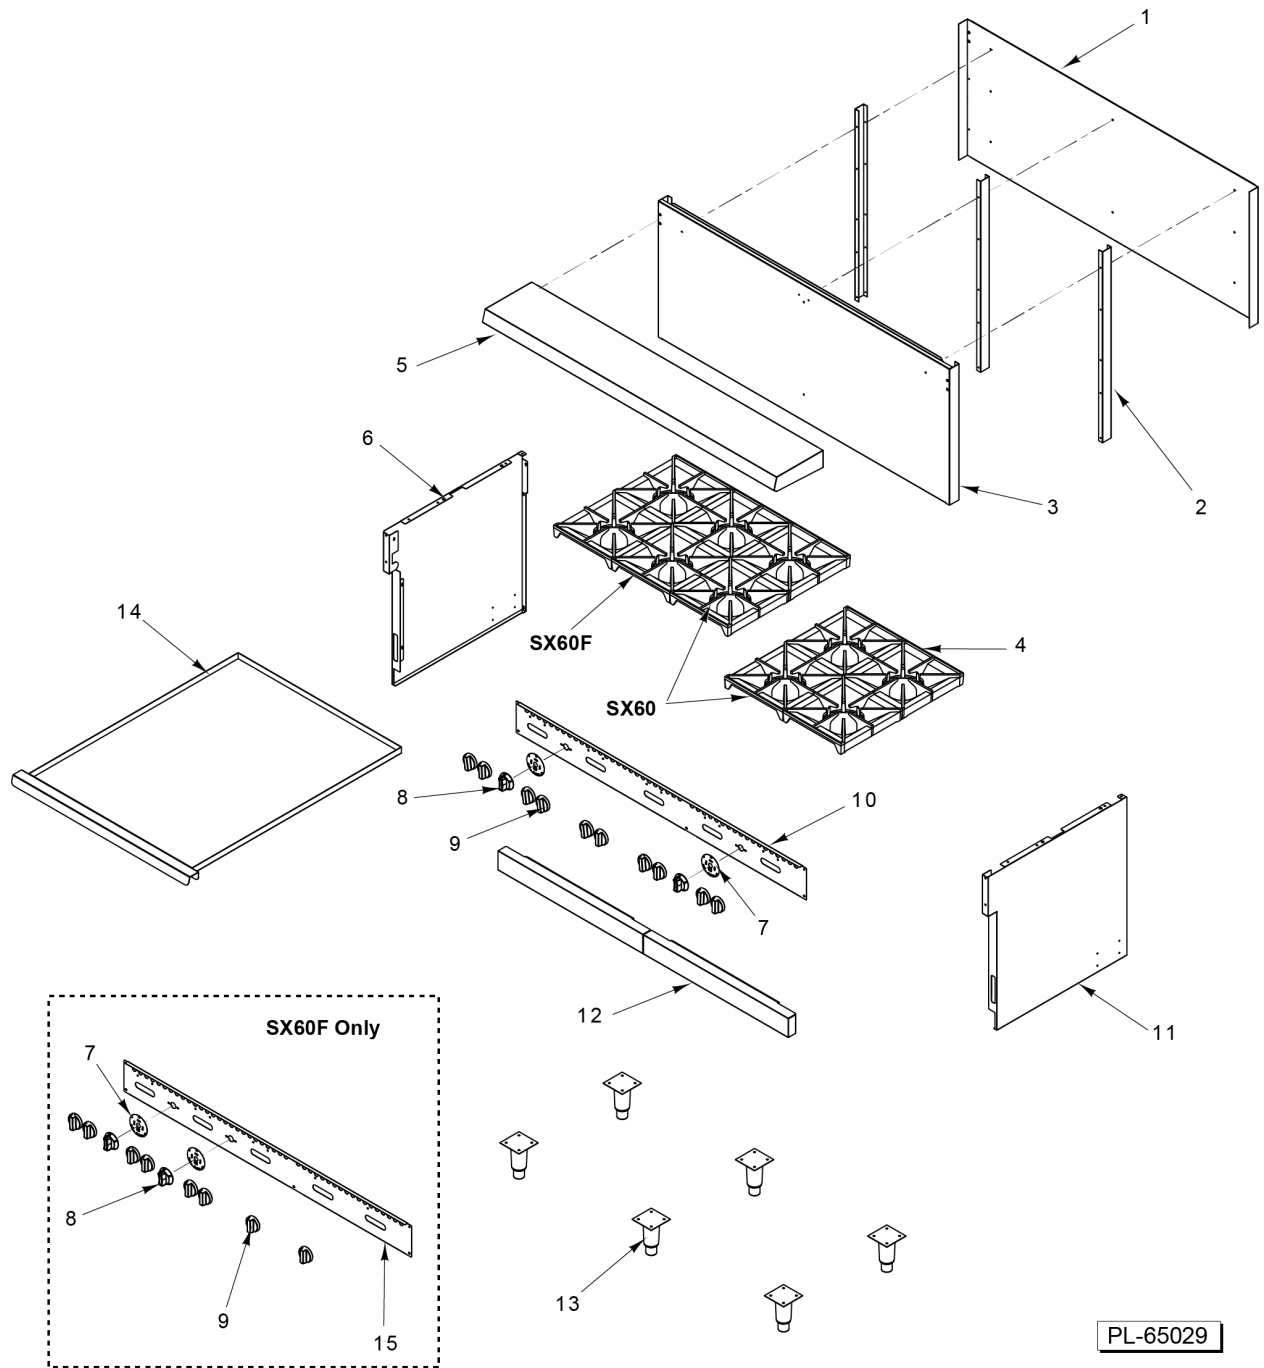


**COVERS
(SX60 / SX60F)**

**COVERS
(SX60 / SX60F)**

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-65029			
1	00-922436-00060	Riser - Back (Back Panel) (SX60).....	1
2	00-922438	Support - Back Riser.....	3
3	00-922437-00060	Riser - Back (Front Panel (SX60).....	1
4	00-925000	Grate.....	AR
5	00-922439-00060	Cover - Shelf (SX60).....	1
6	00-922442-00002	Panel - LH Side (SX60).....	1
7	00-922421	Plate - Dial.....	AR
*8	00-961412	Knob - Oven.....	2
9	00-961411	Knob - Open Top Burner.....	AR
10	00-922446-00060	Panel - Front (SX60).....	1
11	00-922442-00001	Panel - RH Side (SX60).....	1
12	00-922435-00060	Panel - Kick (SX60).....	2
13	00-413112-00012	Leg - Plate Mount (6 In.).....	6
14	00-922432	Crumb Tray Assembly (SX60).....	2
15	00-922446-0060F	Panel - Front (SX60F).....	AR

 * Must also order part number 00-922448 insert core

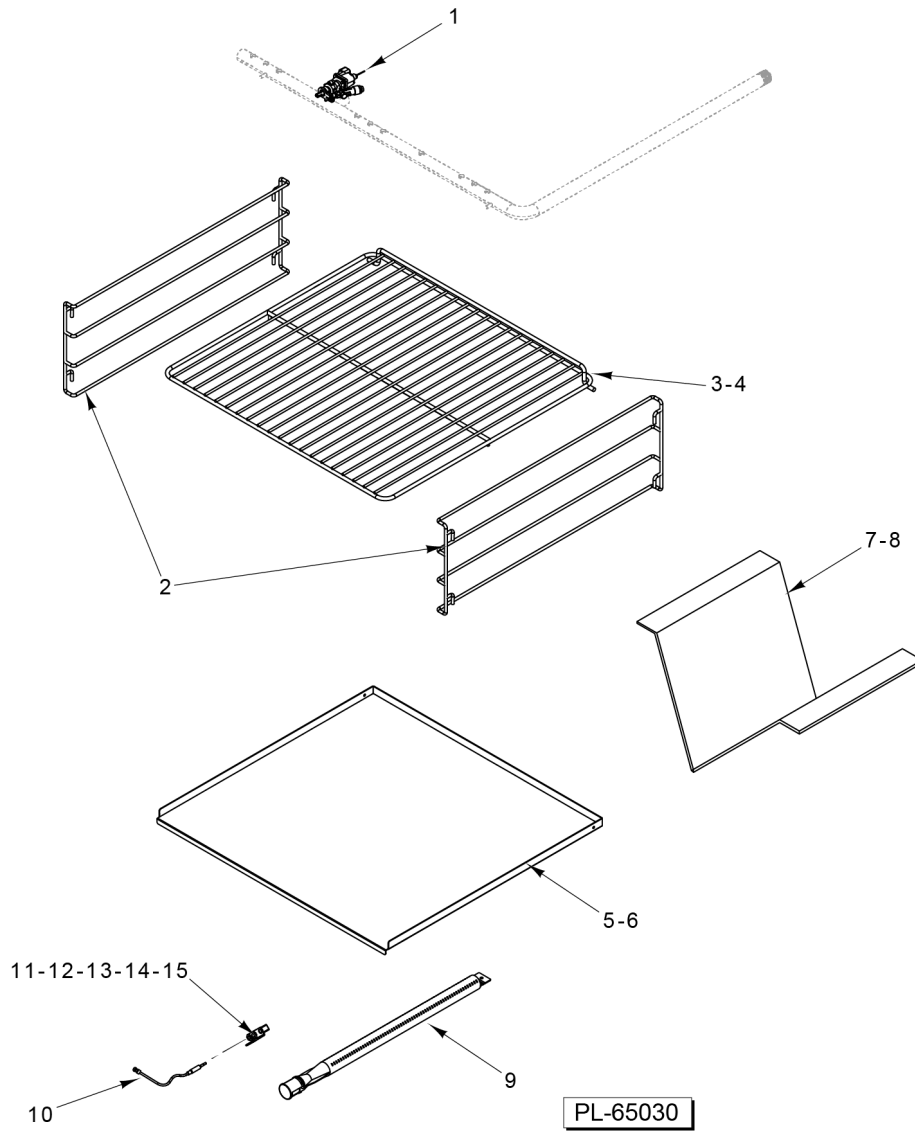


OVEN

OVEN


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-65030			
1	00-961330	Thermostat - SABAF.....	1
2	00-922425	Support - Oven Rack.....	2
3	00-922424	Rack - Oven.....	1
4	00-922424-00024	Rack - Oven (SX24).....	1
5	00-922429	Tray - Porcelian Oven.....	1
6	00-922429-00024	Tray - Porcelian Oven (SX24).....	1
7	00-962617-00001	V Baffle (SX24).....	1
8	00-962617-00002	V Baffle.....	1
9	00-961332	Burner - Oven.....	1
10	00-412788-00060	Thermocouple.....	1
11	00-412787-00001	Pilot - Oven (NAT) (#18) (Before May 2021).....	1
12	00-412787-00003	Pilot - Oven (NAT) (#16) (From May 2021 to November 2021).....	1
13	00-922452-00003	Pilot - Oven (NAT) (#16) (6 mm) (Starting November 2021).....	1
14	00-412787-00002	Pilot - Oven (LP) (Before November 2021).....	1
15	00-922452-00002	Pilot - Oven (LP) (6 mm) (Starting November 2021).....	1

8 00-922491 Tubing - Pilot
PART NOT ILLUSTRATED

 
SX60F

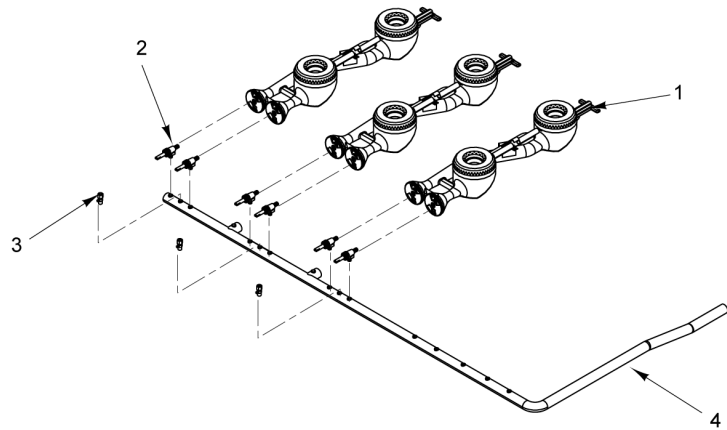


SX60

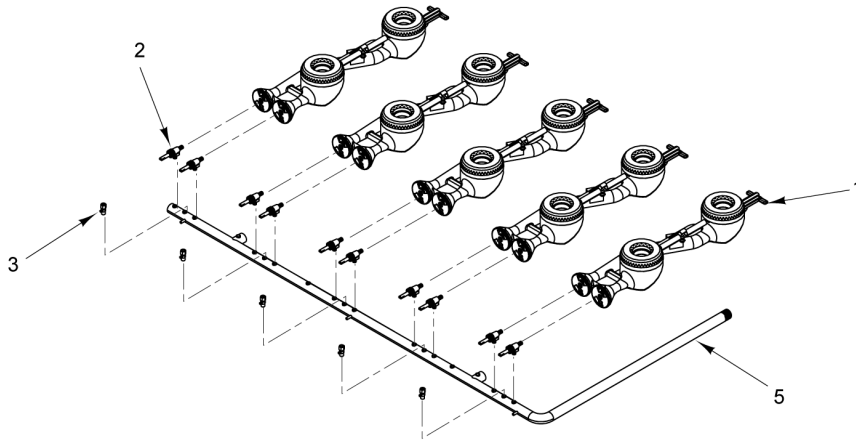 

SX36

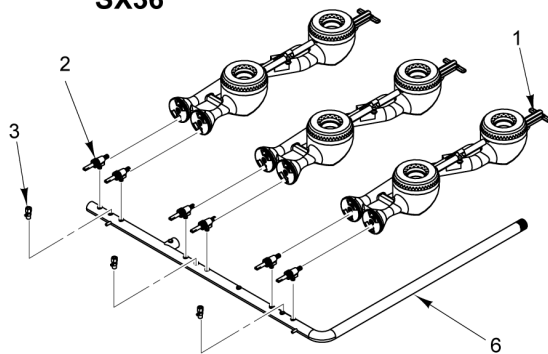 

SX24

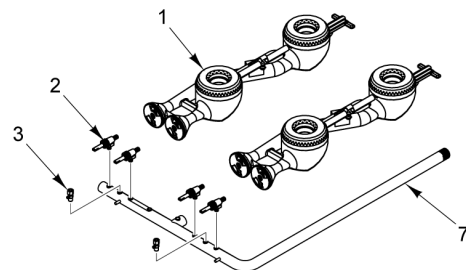 


PL-65031

PIPING

PIPING

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-65031			
1	00-928014-0000A	Open Top Burner.....	AR
2	00-961329	Valve - Gas.....	AR
3	00-922422	Valve - Open Top Pilot.....	AR
4	00-922426	Manifold (SX60F).....	1
5	00-922428	Manifold - Gas (SX60).....	1
6	00-922427	Manifold - Gas (SX36).....	1
7		Manifold - Gas (SX24).....	1
8	00-922491	Tubing - Pilot.....	AR

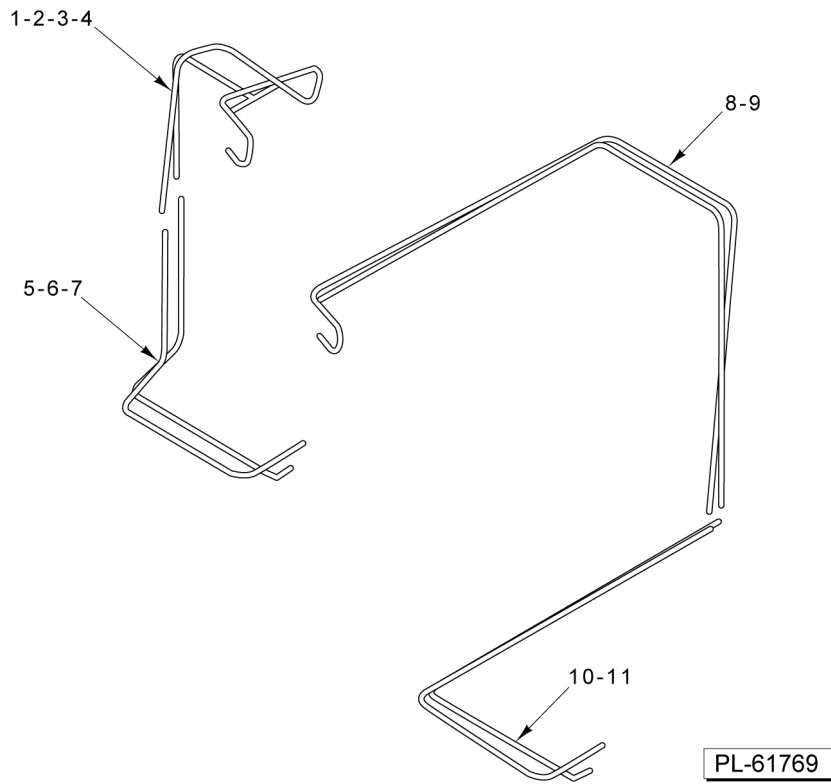 


TUBING

TUBING

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-61769			
1	00-922475	Tube - Oven (Upper) (SX24).....	1
2	00-922459	Tube - Oven (Upper) (SX36).....	1
3	00-962660	Tube - Oven (Upper) (LH) (SX60).....	AR
4	00-962664	Tube - Oven (Upper) (LH) (SX60F).....	AR
5	00-922476	Tube - Oven (Lower) (SX24).....	1
6	00-962287	Tube - Oven (Lower) (SX36).....	1
7	00-962661	Tube - Oven (Lower) (LH) (SX60/60F).....	AR
8	00-962662	Tube - Oven (Upper) (RH) (SX60).....	AR
9	00-962663	Tube - Oven (Upper) (RH) (SX60F).....	AR
10	00-962663	Tube - Oven (Lower) (RH) (SX60).....	AR
11	00-962664	Tube - Oven (Lower) (RH) (SX60F).....	AR

 10 00-922489 Tubing - Pilot
PART NOT ILLUSTRATED

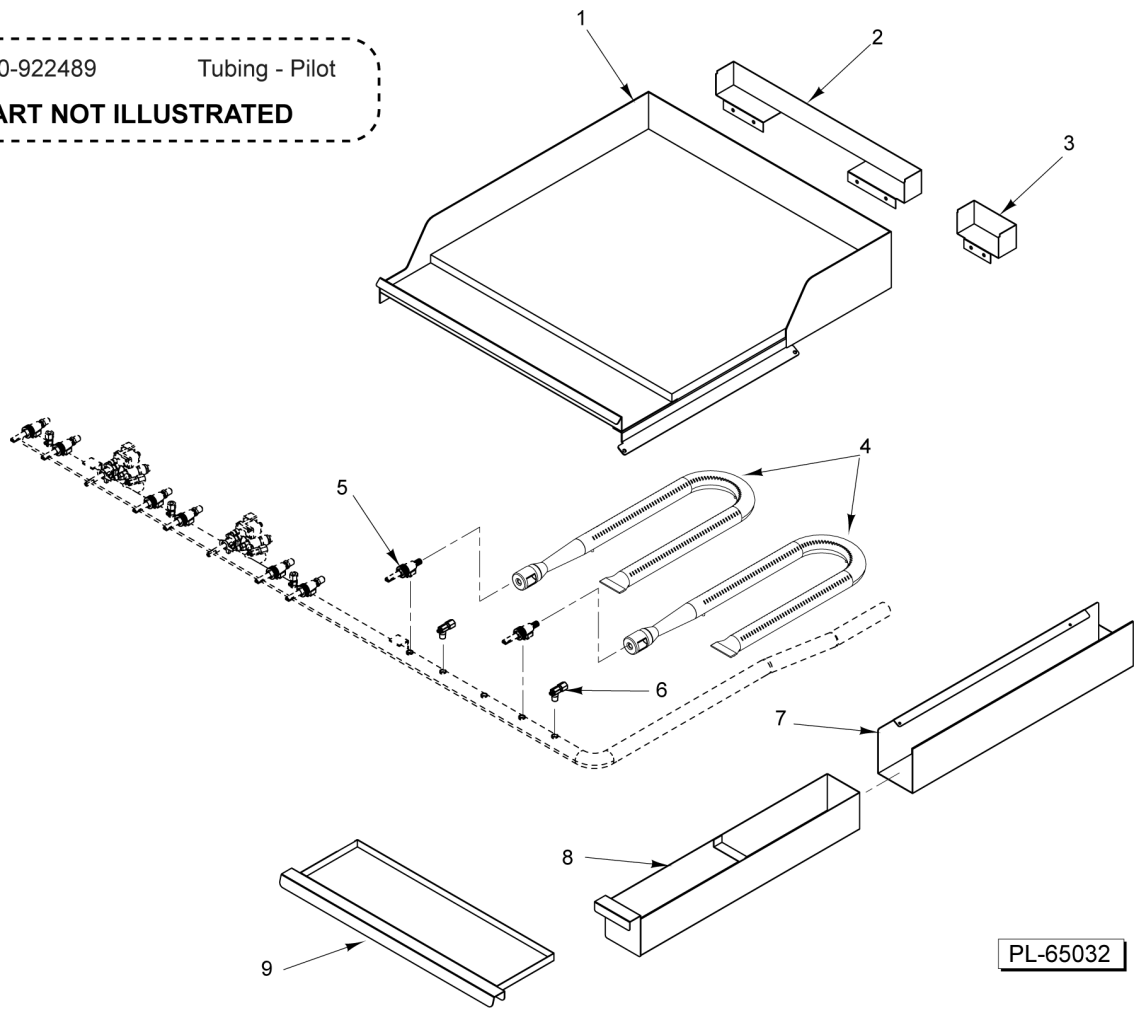

PL-65032

GRIDDLE

GRIDDLE

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-65032			
1	00-922434-0000A	Griddle Plate Assy.....	1
2	00-922444-00002	Box - Griddle Flue (Large).....	1
3	00-922444-00001	Box - Griddle Flue (Small).....	1
4	00-961413	Burner - Griddle.....	2
5	00-961329	Valve - Gas.....	2
6	00-922430	Valve - Griddle Burner Pilot.....	2
7	00-922443	Support - Griddle Front Crumb Tray.....	1
8	00-922433	Griddle Tray Assy.....	1
9	00-922445	Tray - Griddle Front Crumb.....	1
10	00-922489	Tubing - Pilot.....	AR

